




MAGNETIC TUMBLER

The magnetic tumbler designed for Jewellery products, corrects surface defects and provides shine after casting. You can clean the products that come out of the casting directly, as well as provide the shine and cleaning of cut products.

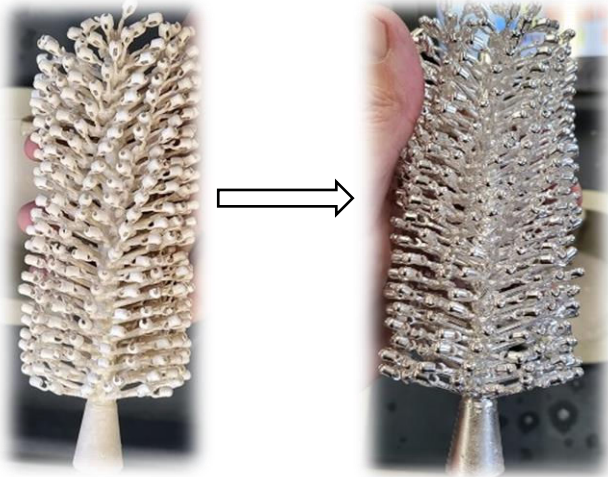


BEFORE

AFTER

WORK EXAMPLE:

Possibility of more number of casting in one time

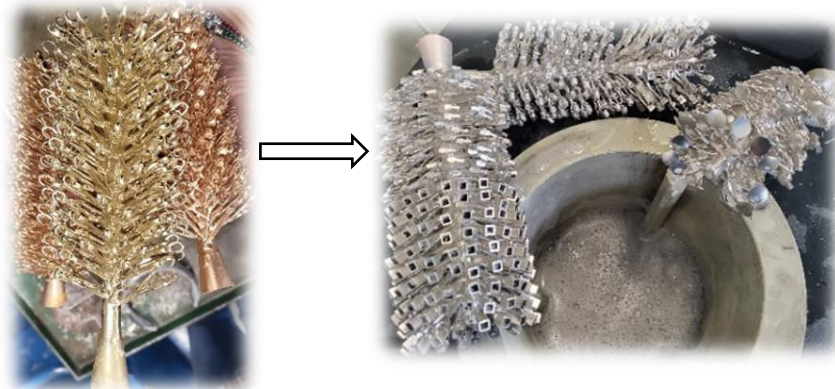

OPTICOM GRAPHITE S.R.L. www.opticomgraphite.com

C.I.M.O. S.R.L. www.cimosrl.it



OPERATING SETTINGS: The machine has a 10-inch touch panel. An easy-to-use program has been designed and offers the opportunity to make your own programs.



RECOMMENDED NEEDLES:

0.35mm x 6.5mm x angle cut
 Amount of needle: 1800-2100 grams
 Water amount: 4 liters



BRIGHTENER LUMACOP 217: optimize for an excellent finish.

SPECIFICATIONS:

Model	MT
Time setting range	1 – 30 minutes
Power source	Volt 3 x 380
Dimensions	480W x 720D x 92H mm
Weight	156 Kg



OPTICOM GRAPHITE S.R.L. www.opticomgraphite.com

C.I.M.O. S.R.L. www.cimosrl.it